



# OPERATING GUIDELINES

## SW8000




**ATTENTION!** Do not use the machine before you have read and understood the User Manual



1. Check the diesel fuel tank level/LPG bottle/ Battery charge. In case refill/change the LPG bottle.



2. In case refill/change the LPG bottle.

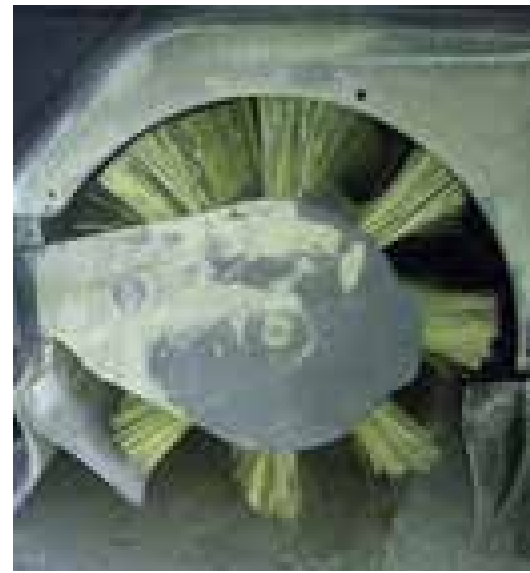

3. Check the main broom bristles wear out and Check that the main broom freely rotate and free from ropes or debris.



4. Open the engine bonnet and check that the engine and hydraulic oil radiator's fins are clean from dust.




5. Check the engine liquid coolant level.



6. In case it is low check the amount of liquid in the expansion tanks and if needed use to refill the radiator.



7. Check the engine oil level with the oil stick on the internal side of the engine.

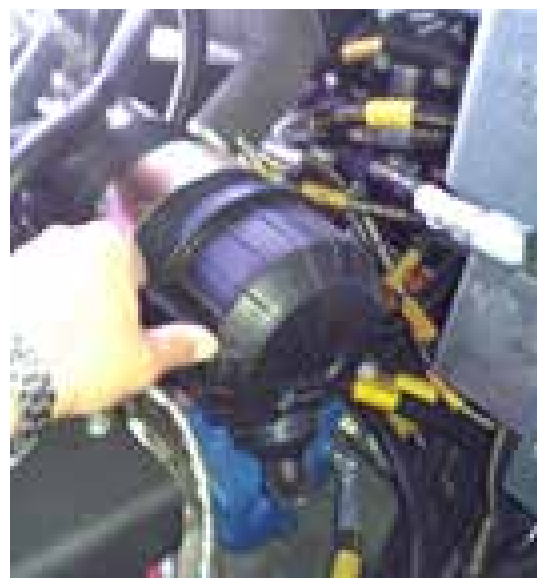

8. Make sure that the engine air cleaner and pre-filter are free from dust.



9. Inspect the hopper filter conditions. Plies should be clean and intact.



10. In case blow the filter with air.



11. Check that the side skirt are at the proper height before sweeping.....



12. ....and do the same for the rear skirt.



If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

**PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS**