



# Trouble Shooting Poster - MC 3C & MC 4M



## ATTENTION!

Do not use the machine before you have read and understood the User Manual

### CHECK SUCTION FILTER / RINSE FOAM SPRAYER SPONGE



1. Rinse plastic suction nozzle at hose end. Use paper clip or similar.



2. Use screwdriver to remove pin on FoamSprayer.



3. Pull out blue front part and separate it from white part.



4. Use paper clip to push out the SS sponge and rinse with tempered water / compressed air. Repeat until clean.

### GREASE ALL COUPLINGS AND NIPPELS



1. Ergo 2000 gun quick coupling must be greased with water resistant lubricant.



2. 3/8" hose quick coupling being greased. Use water resistant lubricant.



3. 3/8" High Pressure Nipple being greased. Use water resistant lubricant.



4. Nipple on lance must be greased with water resistant lubricant.

### RINSE THE INTERNAL WATER INLET FILTER



1. Remove water inlet coupling from machine.



2. Pull out water inlet filter with a finger.



3. Rinse filter with running clean water / or compressed air.



4. Reinstall water inlet filter and water inlet coupling.

### OIL CHECK & REFILL



1. Check oil level at right side of cabinet.



2. Remove front cabinet by turning 2 quarter turn screws at right and left top cabinet side.



3. If necessary refill oil to max. level point for the model in question.



4. Refill with correct oil type.